

# LIBRARY AND ROKU INFORMATION

## Library's Contact Details

Phone: 307-367-4114

Email: [circulation@sublettecountylibrary.org](mailto:circulation@sublettecountylibrary.org)

## Regular Hours

Monday - Thursday: 10AM - 8PM

Friday: 10AM – 6PM

Saturday: 10AM - 5PM

Sunday: CLOSED

If you have any questions about your Roku once you get it home, please do not hesitate to contact the Library!

## Roku Circulation Periods

7 Day Circulation with no renewals

The Roku Streaming Stick is a small device that plugs into your TV's HDMI port and delivers streaming content via the internet. Through Roku, you can access of thousands of exclusive movies and shows from services such as Netflix and HBO Max.

## WHAT IS IN THE ROKU KIT

The Roku Kit should come with six items, this booklet not included. When you return the Roku Kit, please make sure that all items are present.

The items within the Roku Kit are as follows:

1. The Roku Kit Case.
2. The Roku Remote.
3. The Power Adaptor Plug.
4. The Roku's USB Power Cable.
5. The Roku Stick.
6. The Roku's USB Power Extender Cable.

The Roku Remote is battery powered and operates with two (2) AA batteries.



## ASSEMBLING THE ROKU

1. The Roku Stick (5) is attached to the small end of the Roku USB Power Cable (4).
2. The Roku USB Power Cable's (4) larger end goes into the Roku's USB Power Extender Cable (6), which is the longest cord.
3. The USB end of the Roku's USB Power Extender Cable (6) goes into the Power Adaptor Plug (3).
4. The Roku Stick (5) plugs into your TV's open HDMI port.



# ROKU INSTRUCTIONS

1. After assembling the Roku, plug the Roku Stick into an open HDMI port on your TV.



2. Next, plug the power adaptor into an outlet. Turn on your TV and select the correct HDMI input source. Once you do this, you should see the Roku screen.
3. Set up your network connection by scrolling down to Settings, and then scroll to Network.
4. Select Wireless and enter your wireless network name and password, if necessary. (Note: this model of Roku does not support Ethernet cable connection.)
5. The Roku home screen should now be available.



The power button turns the Roku on/off.

The home button will return users to the Roku's Home Screen.

The back button will take the users back one screen.

The Roku is controlled through these four directional buttons and the OK/middle button. Use these buttons for on-screen selections.

The arrow will replay the last 7 seconds. The microphone is the voice search and command button. Press and hold while speaking; release the button when done. The asterisk displays additional options.

These are the media playback controls. They are, in order: rewind, play/pause, and fast forward. Press rewind or fast forward multiple times to control the speed.

The four preset channel shortcuts show the logo of a preset streaming service.

